

## Changing VFD Settings (Allen-Bradley 1305)



To *Unlock* the VFD:

1. ESC → [Up Arrow] [Down Arrow] → Choose Mode Program → [Left Arrow]
2. [Up Arrow] [Down Arrow] → Choose Group Frequency Set → [Left Arrow]
3. [Up Arrow] [Down Arrow] → Freq Select 1 → SEL
4. [Up Arrow] [Down Arrow] → Freq Select 1 Adapter 1 → [Left Arrow]
5. ESC ESC ESC → At Speed +00.00 Hz → [Potentiometer]

To change the *preset frequency* and then *lock* the VFD:

1. → → **Choose Mode Program** →
2. → **Choose Group Frequency Set** →
3. → **Preset Freq 1  
60.0 Hz**
4. → **Preset Freq 1  
60.0 Hz** → to enter desired value.
5. → **Preset Freq 1  
60.0 Hz** → to enter desired value.
6. → **Preset Freq 1  
60.0 Hz** → to enter desired value.
7. → **Preset Freq 1  
~~60.0~~ Hz** → to enter desired value;
8. → **Freq Select 1  
---** →
9. → **Freq Select 1  
Preset Freq 1** →
10. → **At Speed  
+00.00 Hz** +