

## Changing VFD Settings (Allen-Bradley Powerflex)



To *Unlock* the VFD:

1. **Esc Esc** →
2. **Esc** → → **▲ ▼** →
3. **←** →
4. **▲ ▼** → → **←** →
5. **←** → + **PROGRAM** (red dot)
6. **▼** → → **←**
7. **Esc Esc Esc** → +

To change the *preset frequency* and then *lock* the VFD:

1. →
2. → → →
3. → → →
4. → → +
5. to enter the desired value → →
6. to enter the desired value → →
7. to enter the desired value →
8. →
9. → → →
10. → → →
11. → +
12. → →
13. → +